

How To Update USB Driver

Step1 : Install XID-83XX/86XX printer driver

*Please confirm Core Isolation is "OFF".




Step2 : Update the driver with Update Tool


*Power off the printer.

*Please exit all Windows applications that are running and wait until all documents are printed.

Click "Setup.exe" in the Update Tool zip file and follow procedures.

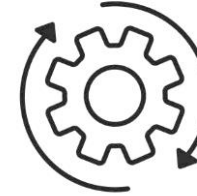

Step3 : Reboot your PC

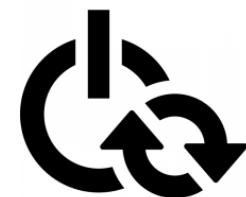

Step4 : Ready to Print

*Now you can reactivate Core Isolation.